



## **MOVABLE TOP SALAMANDER**

### **Operational Instructions for VCE model**

#### **Mode A (30% standby with “instant-on” feature):**

- 1) Push round knob once to turn salamander on, and the lighted panel will display “0”.
- 2) Salamander will activate to 30% standby power level.
- 3) Select which cooking zones are desired to be active – left, right or left and right together – by depressing the pictogram for the desired elements.
- 4) When a plate or pan is placed on the work grid and pushes the rear bumper, the salamander will come up to full power.
- 5) Removing the plate from the bumper will return the salamander to the 30% standby power mode, keeping the salamander preheated.
- 6) At the end of the cooking period, push the knob once to turn the unit off.

#### **Mode B (full power – no “instant-on” or standby features):**

- 1) Push round knob once to turn salamander on, and the lighted panel will display “0”.
- 2) Push the icon once showing a “hand” on the front control panel.
- 3) Select which cooking zones desired to be active – left, right or left and right together – by depressing the pictogram for the desired elements.
- 4) At the end of the cooking period, push the knob once to turn the unit off.

#### **Mode C (30% standby with “instant-on” feature and countdown audible timer):**

- 1) Push round knob once to turn salamander on, and the lighted panel will display “0”.
- 2) Salamander will activate to 30% standby power level.
- 3) Select which cooking zones desired to be active – left, right or left and right – by depressing the pictogram for the desired elements.
- 4) Turn knob of on/off switch to desired timer setting.
- 5) When a plate or pan is placed on the work grid and pushes the rear bumper, the salamander will come up to full power, and the timer will commence countdown.
- 6) At the end of the countdown, the heating elements will turn off, and the timer will make an audible sound until the plate or pan is removed from the bumper.
- 7) When the plate or pan is removed from the bumper, the salamander will return to 30% standby mode and the timer will automatically reset to the previous time setting. This time setting can be changed by rotating the knob to the desired time setting.
- 8) At the end of the cooking period, push the knob once to turn the unit off.